

ECOSYS PA2100cx
ECOSYS PA2100cwx
ECOSYS MA2100cfx
ECOSYS MA2100cwx

Clearing Paper Jams
Section-D





Caution:

If the paper tears during removal, be sure to remove any loose scraps of paper from inside the Machine.



Scraps of paper left inside the machine could cause subsequent jamming

If a jam occurs, a jam message will appear on the screen indicating the area of the jammed paper.

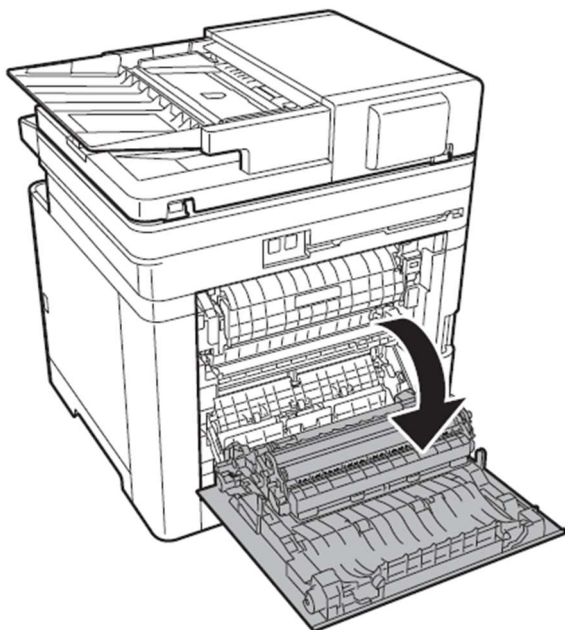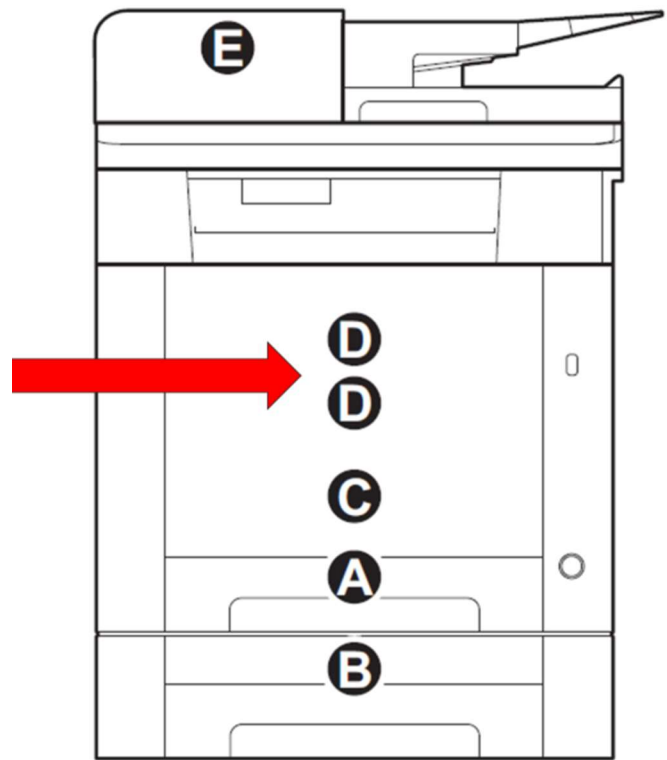


Open the rear cover


Remove any visible jammed paper

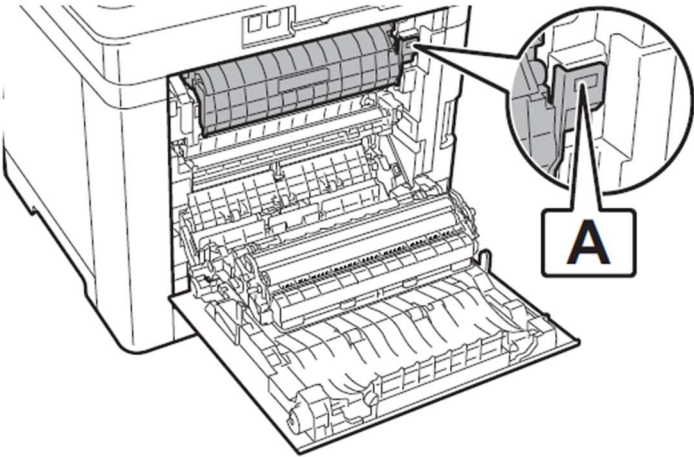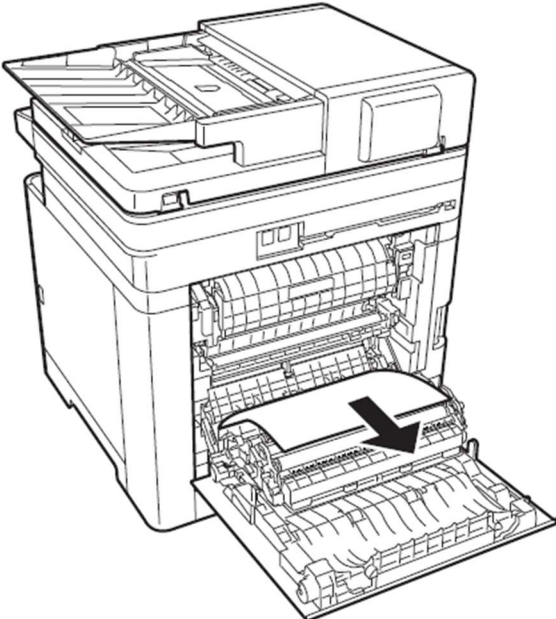

Pull lever A

And open the paper feed guide

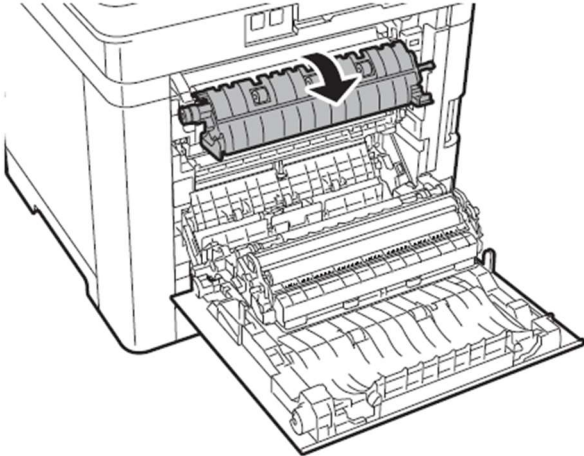


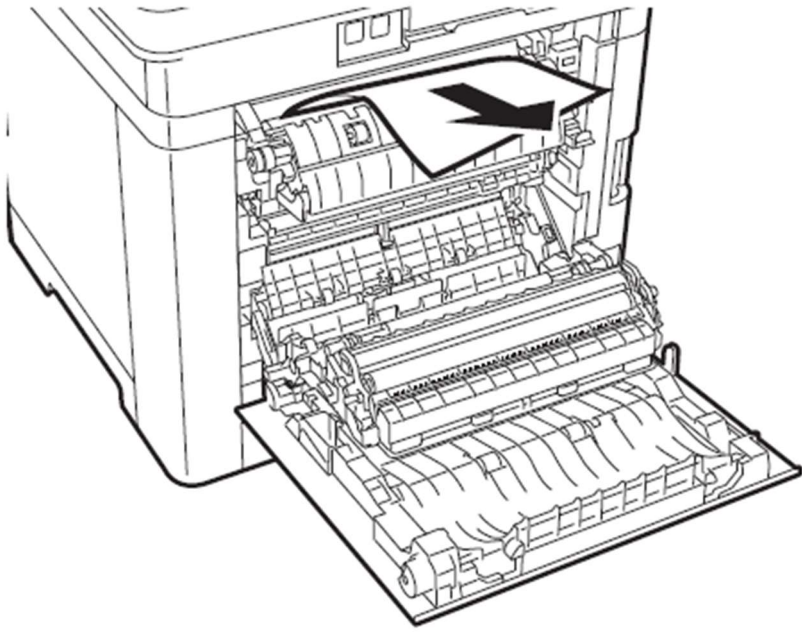


Remove any
visible jammed
paper

Caution: this area may be very hot, please take care when removing jammed paper



Pull lever B

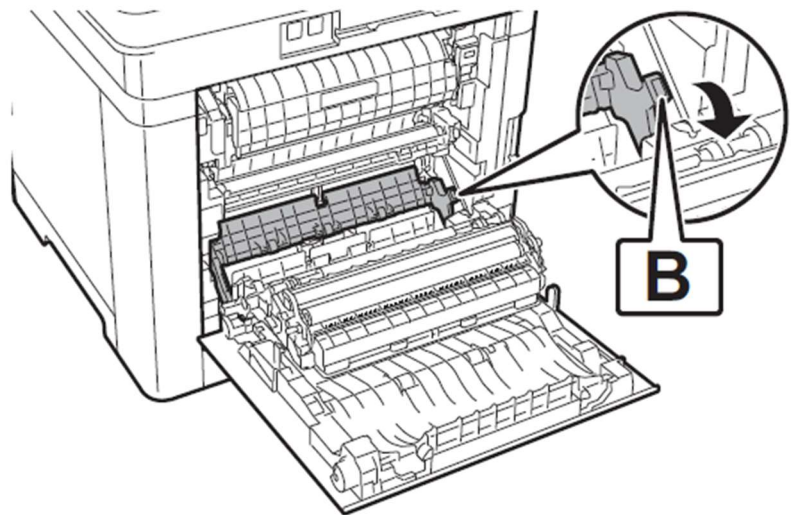

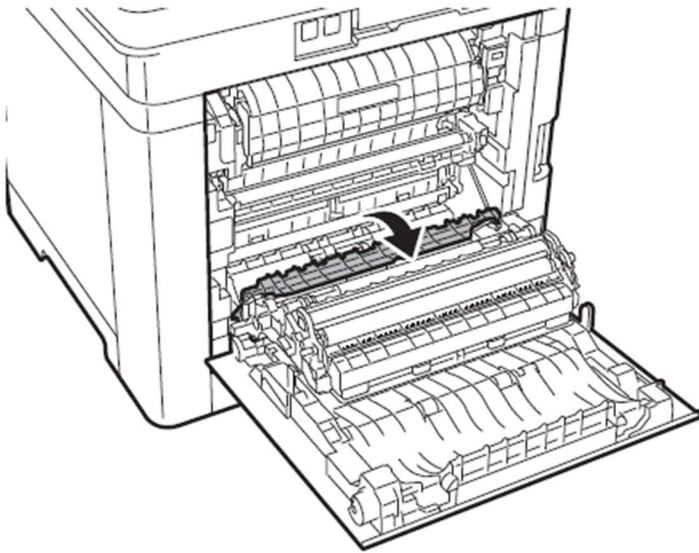



Release the paper
feed guide

Remove any
visible jammed
paper

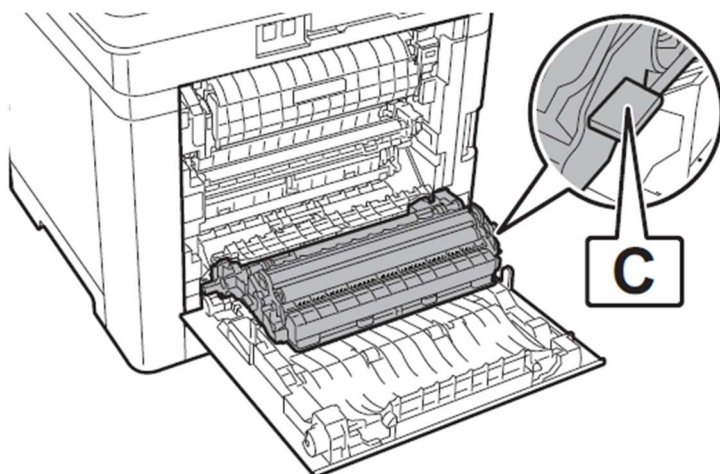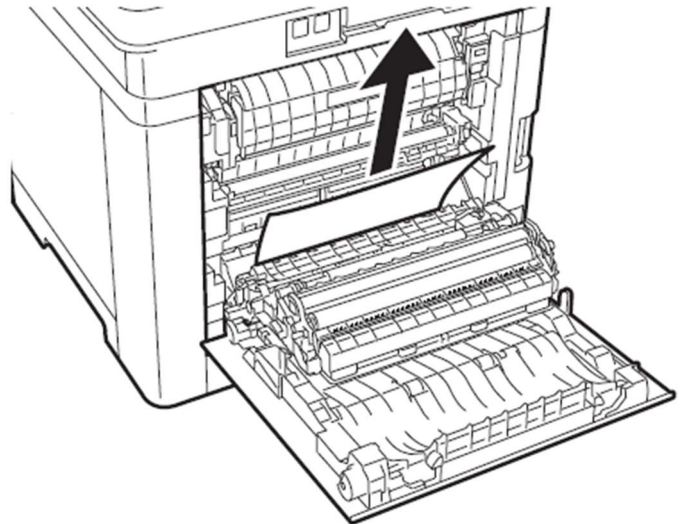


Pull on area C

Lift the duplex
guide up towards
the machine

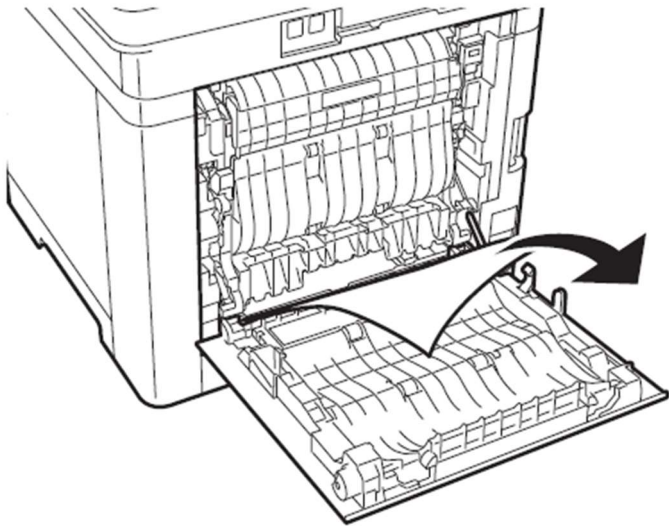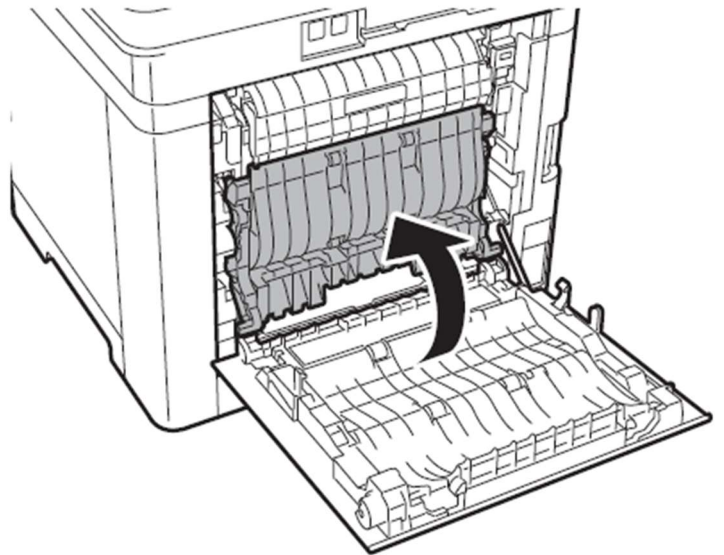

Remove any
visible jammed
paper

Once all jammed paper has been removed, return the rear cover to its original position to continue.

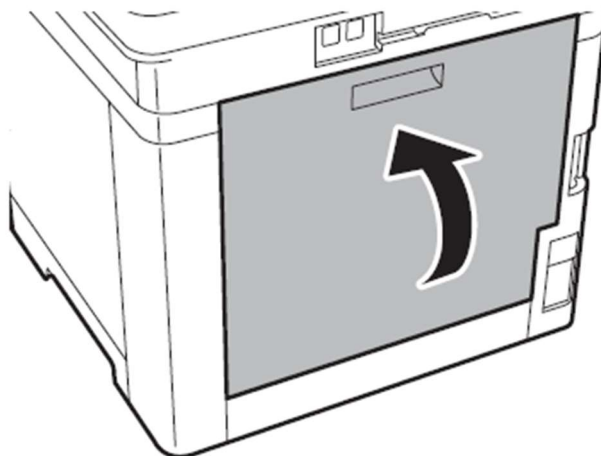

KYOCERA Document Solutions UK

Eldon Court, 75-77 London Road,

Reading, RG1 5BS

Web: www.kyoceradocumentsolutions.co.uk

