

Sending

Specifying Destination

Choosing from the Address Book

Select a destination registered in the Address Book.

For more information about how to register destinations in the Address Book, refer to the following:

1 In the basic screen for sending, select [Address Book].

2 Select the destinations.

Select the checkbox to select the desired destination from the list. The selected destinations are indicated by a checkmark in the check box.

You can also select [Menu] to perform a more detailed search.

 


NOTE

To deselect, select the checkbox again and remove the checkmark.

Destination Search

Destinations registered in the Address Book can be searched.

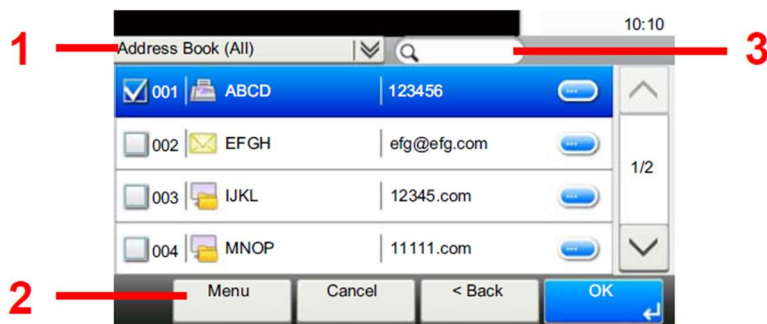

| Keys used | | Search type | Subjects searched |
|-----------|----------------------|--------------------------------|--|
| 1 | | Advanced search by destination | Advanced search by type of registered destination (Email, Folder (SMB/FTP), FAX or Group). |
| 2 | Narrow Down | Advanced search by destination | Advanced search by type of registered destination (Email, Folder (SMB/FTP), FAX or Group). |
| | Search (Name) | Search by name | Search by registered name. |
| | Search (No.) | Search by number | Search by registered address number. |
| | Sort (Name) | Change of display order | Sorts the list by destination name. |
| | Sort (No.) | | Sorts the list by destination address number. |
| 3 | | Search by name | Search by registered name. |



NOTE

You can specify a destination by address number by selecting the **[Quick No. Search]** key.

3 Accept the destination > [OK]