

Sending

Specifying Destination

Entering an E-mail Address

1 In the basic screen for sending, select [E-mail].

2 Enter destination E-mail address > [OK]

Up to 128 characters can be entered.

To enter multiple destinations, select [**Next Destination**] and enter the next destination. Up to 100 E-mail addresses can be specified.

You can register the entered E-mail address in the Address Book by selecting [**Menu**] > [**Add to Address Book**]. You can also replace the information for a previously registered destination.

Destinations can be changed later.

