
Remove any jammed paper in the Inserter

ACAUTION


- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine.
 Scraps of paper left in the machine could cause subsequent jamming.

Straight pass


Open the front cover.

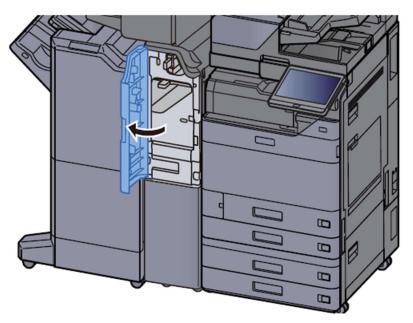


Open the transport guide (E1).

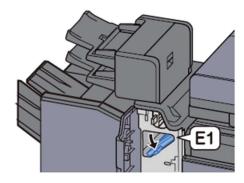


Remove any jammed paper.

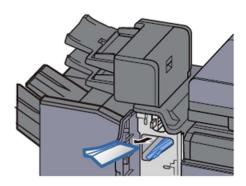

Return the transport guide (E1) to the original position.

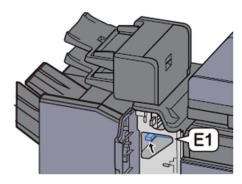


5 Return the cover to the original position.

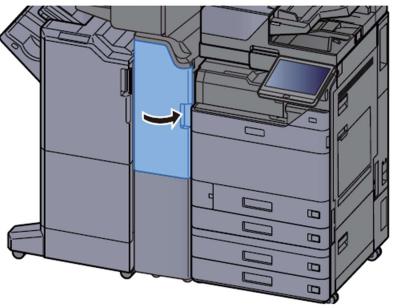


Vertical transport section


Open the front cover and right cover.

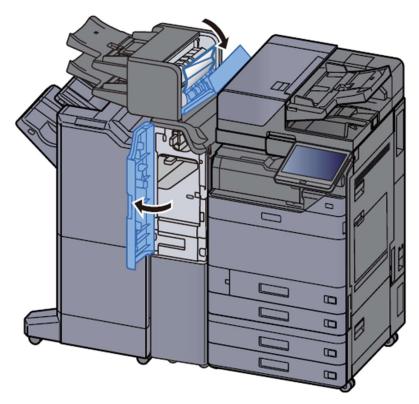


2 Open the transport guides (E1) and (E2).

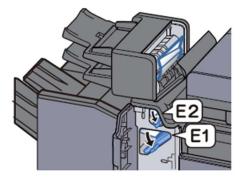


Remove any jammed paper.

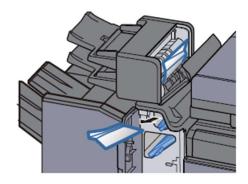


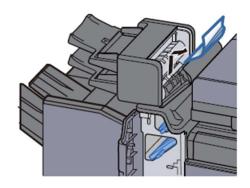

Return the transport guides (E1) and (E2) to the original position.

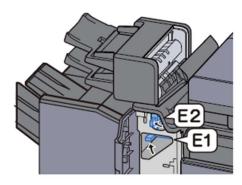


5 Return the cover to the original position.

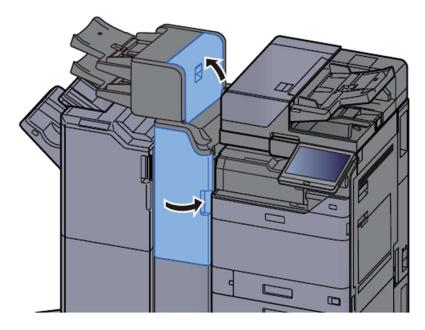


Tray 1 lift error


Load paper in tray 1.

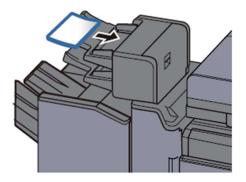

Open the right cover.

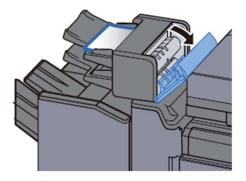


3 Close the right cover.

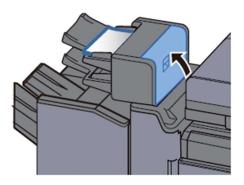


Tray 2 lift error

Load paper in tray 2.

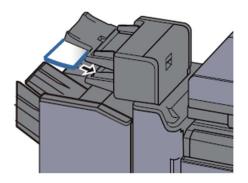

Open the right cover.

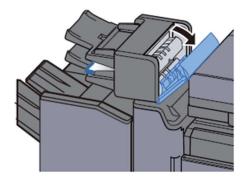

3 Close the right cover.

