 

Remove any jammed paper in the Z-fold unit




- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.

Folding machine tray output


Open the front cover.

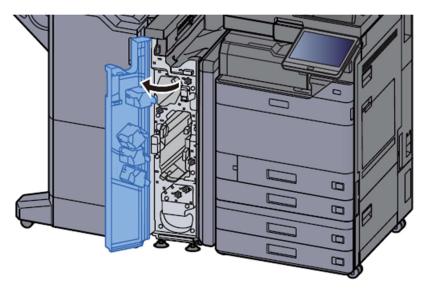


Open the transport guide (N12).

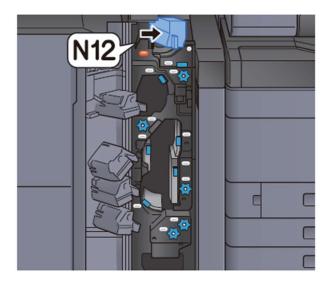


Remove any jammed paper.

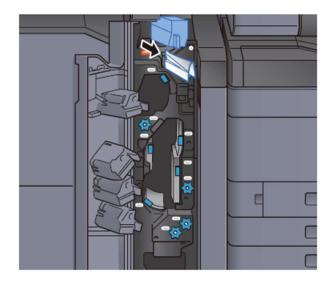


Return the transport guide (N12) to the original position.

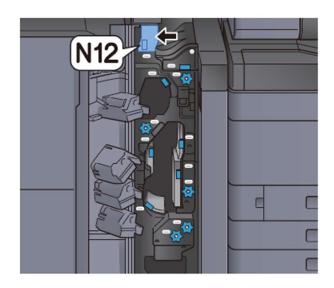

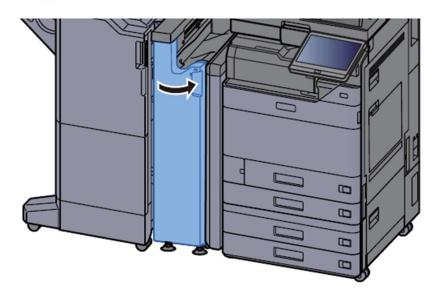


Relay transport guide plate


Open the front cover.

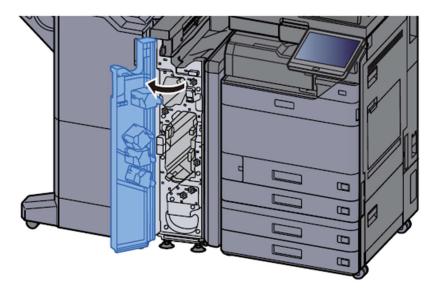


Open the transport guide (N11).

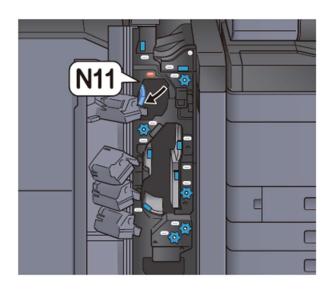


Remove any jammed paper.

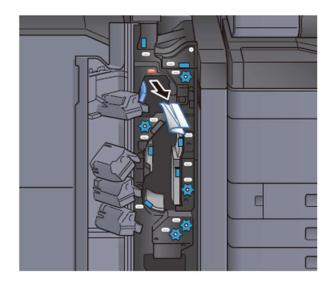


Return the transport guide (N11) to the original position.

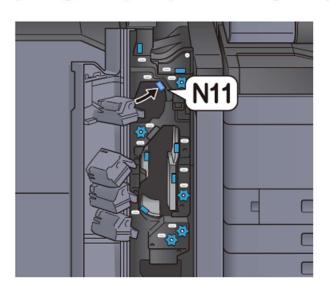

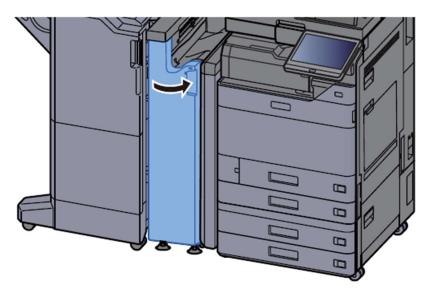


Paper transport roller knob


Open the front cover.

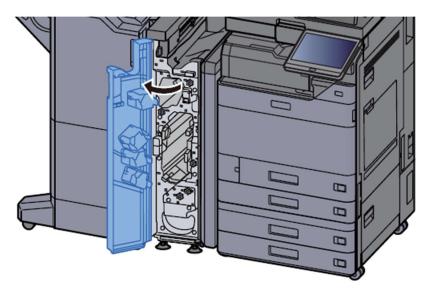


Open the transport guide (N11).

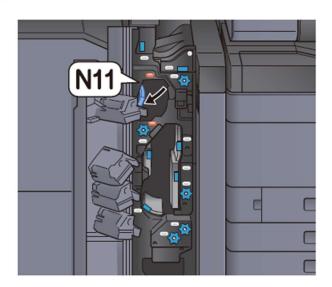


3 Turn knob (N10).

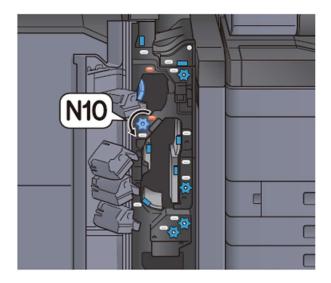


Take out the jammed paper.

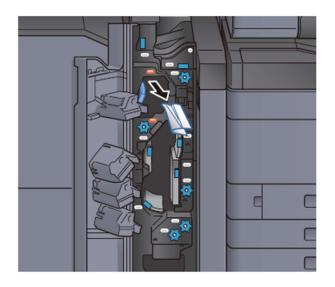


5 Return the transport guide (N11) to the original position.

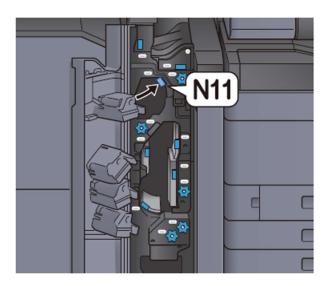

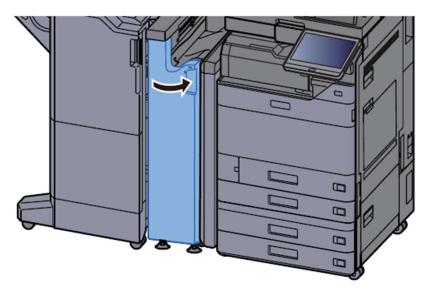


Additional folding guide plate


Open the front cover.

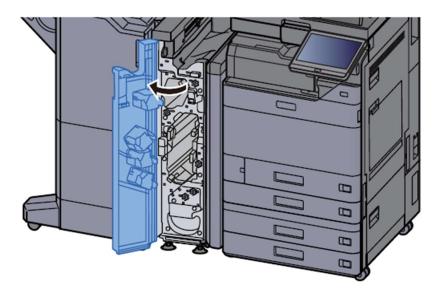


Open the transport guide (N9).

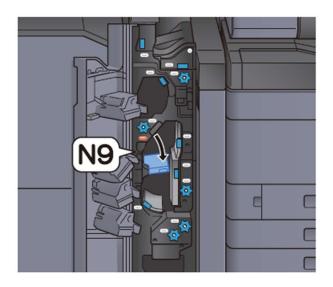


Remove any jammed paper.

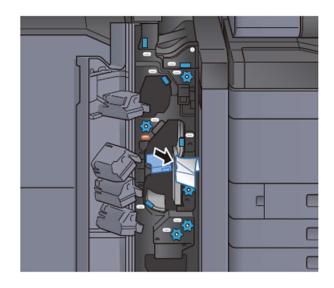


4 Return the transport guide (N9) to the original position.

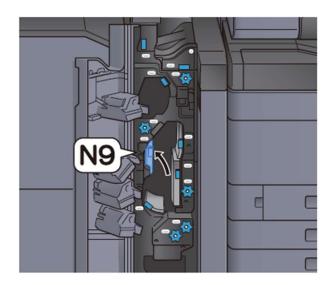

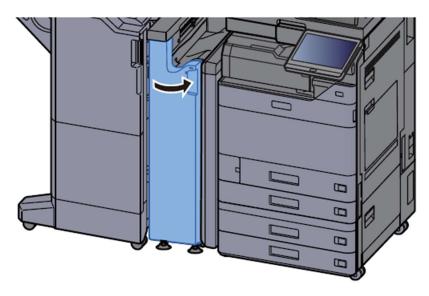


Post-folding transport guide plate


Open the front cover.

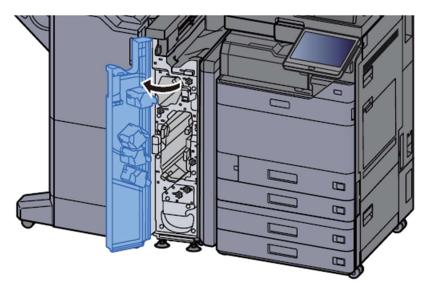


Open the transport guide (N8).

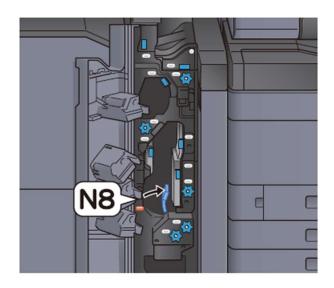


Remove any jammed paper.

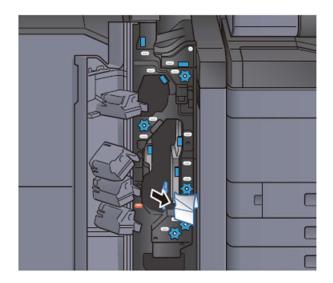


Return the transport guide (N8) to the original position.

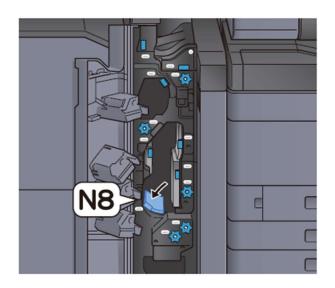

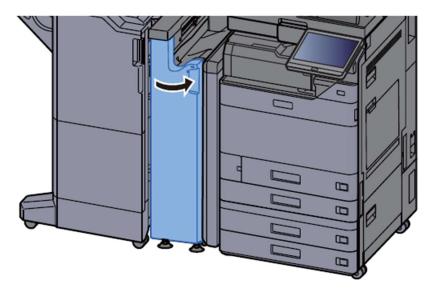


Folding roller knob


Open the front cover.

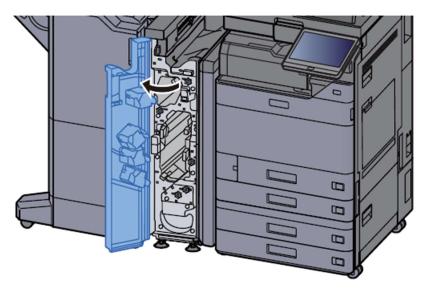


Open the transport guides (N8).

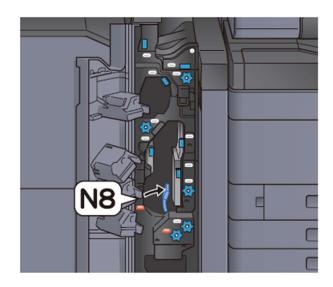


3 Turn knob (N7).

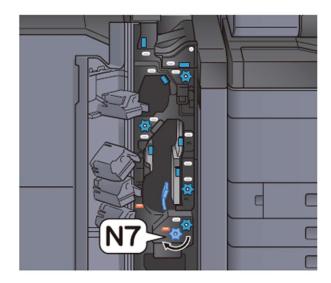


Take out the jammed paper.

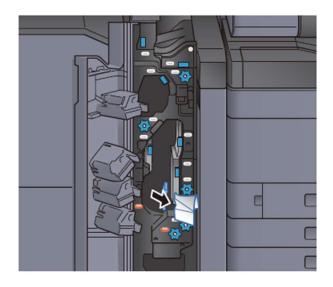

5 Return the transport guide (N8) to the original position.

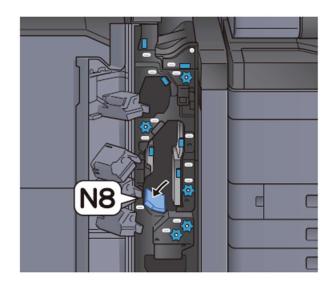


6 Close the front cover.

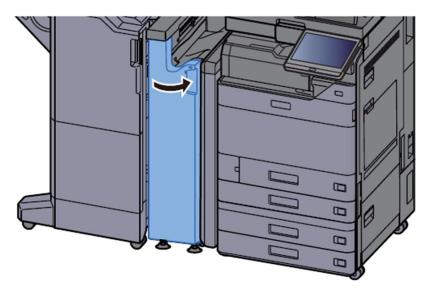


Registration roller knob


Open the front cover.

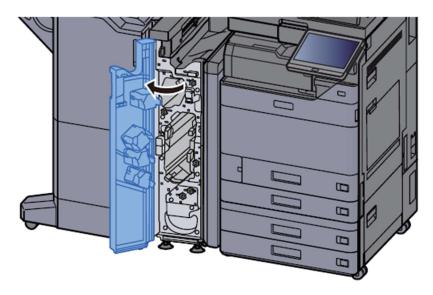


Open the transport guides (N4).

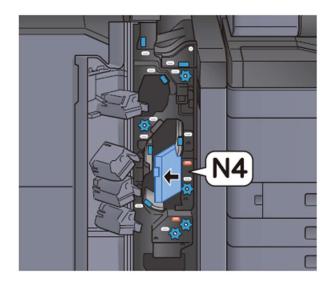


3 Turn knob (N6).

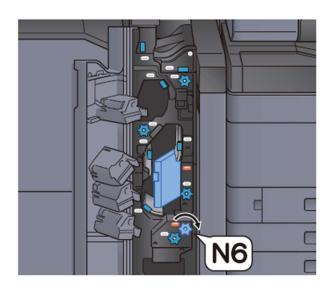


Remove any jammed paper.

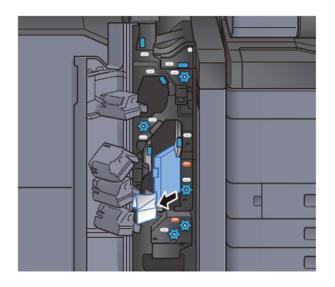


5 Return the transport guide (N4) to the original position.

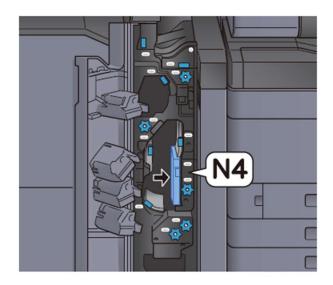

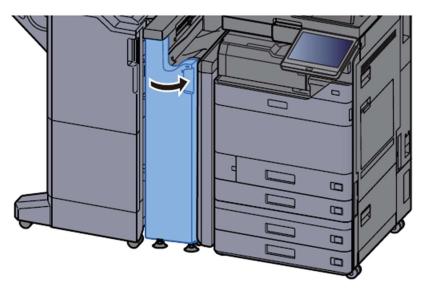


Paper stack roller knob


Open the front cover.

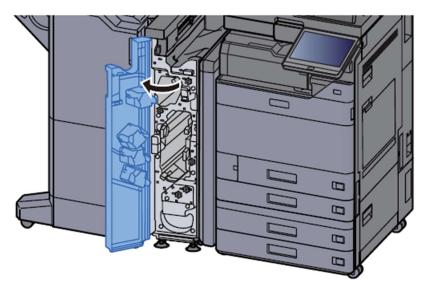


Open the transport guides (N4).

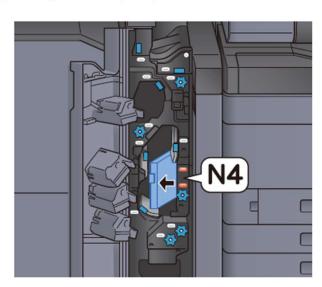


3 Turn knob (N5).

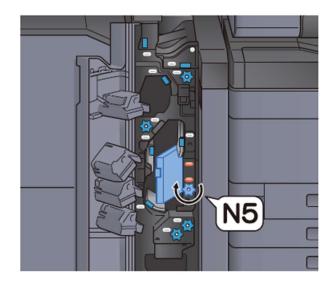


Remove any jammed paper.

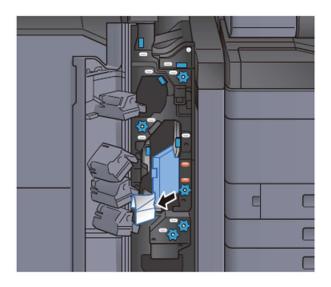

Return the transport guide (N4) to the original position.

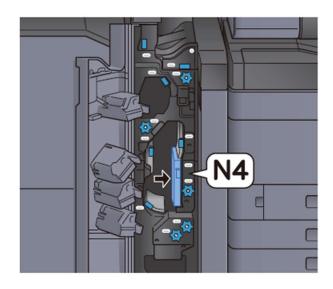


6 Close the front cover.

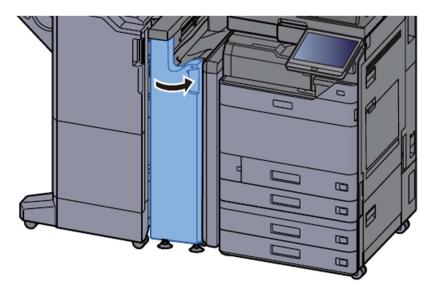


Resist transfer guide plate


Open the front cover.

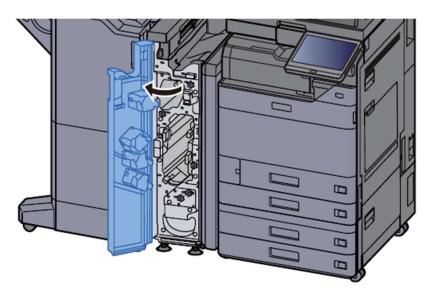


Open the transport guides (N4).

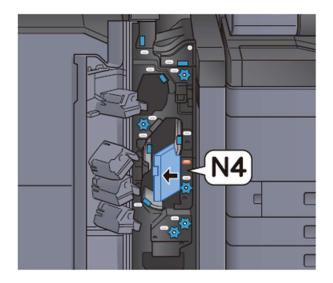


Remove any jammed paper.

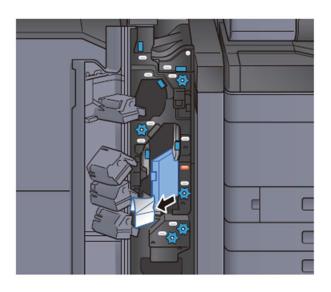


4 Return the transport guide (N4) to the original position.

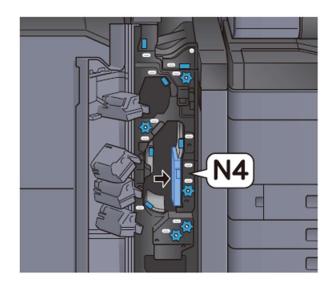

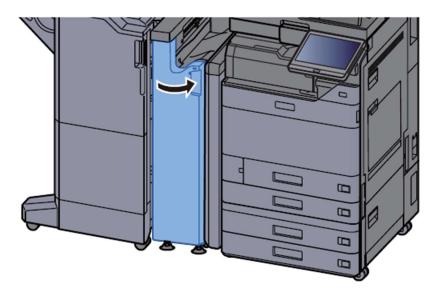


Pre-registration transport guide plate


Open the front cover.

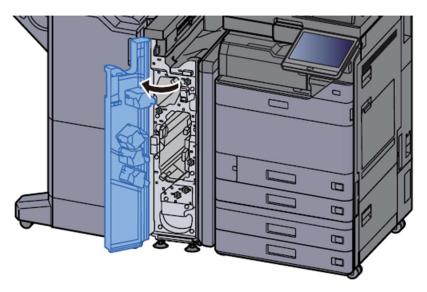


Open the transport guides (N3).

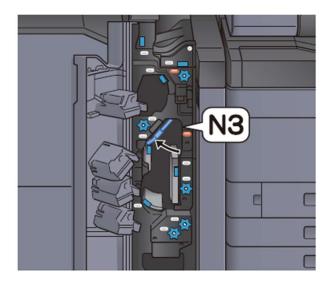


3 Turn knob (N2).

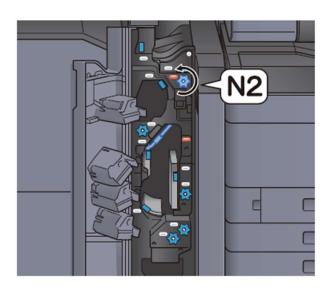


Remove any jammed paper.

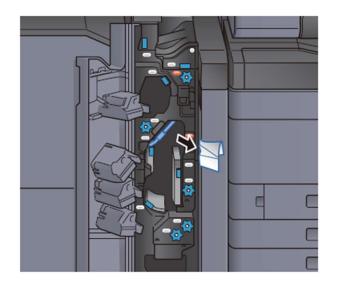


5 Return the transport guide (N3) to the original position.

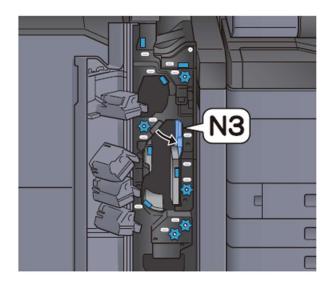

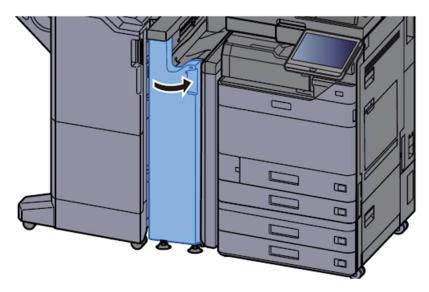


Z-fold unit Clear paper jam


Open the front cover.

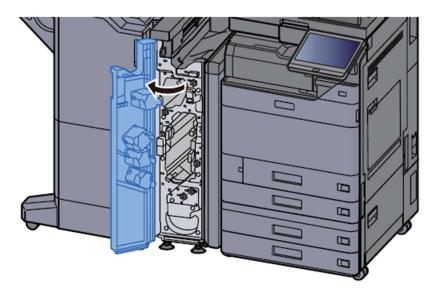


Open the transport guides (N3).

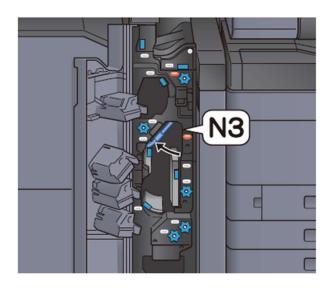


3 Turn knob (N2).

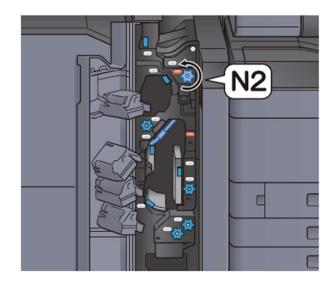


Remove any jammed paper.

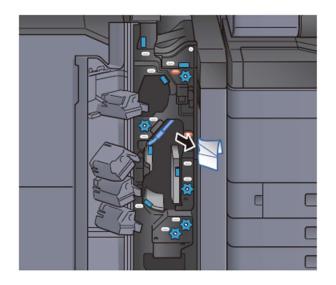

5 Return the transport guide (N3) to the original position.

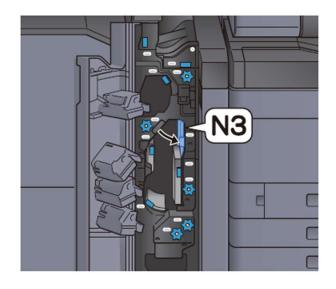


6 Close the front cover.

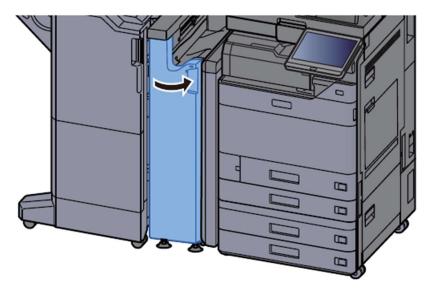


Entrance guide plate


Open the front cover.

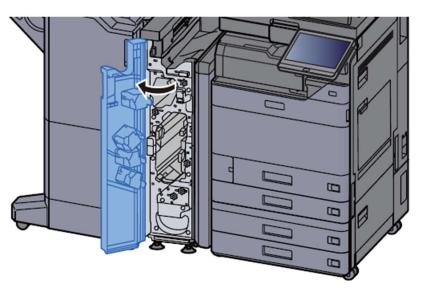

Open the transport guides (N1).

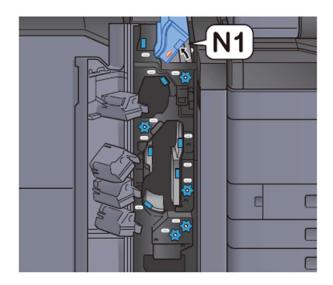

Remove any jammed paper.

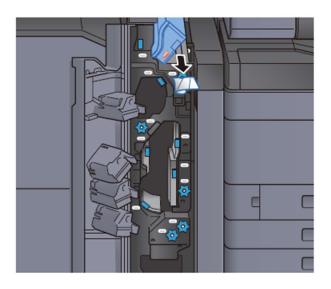

Return the transport guide (N1) to the original position.

