 

Remove any jammed paper in the Multipurpose Tray




- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


Remove any jammed paper.

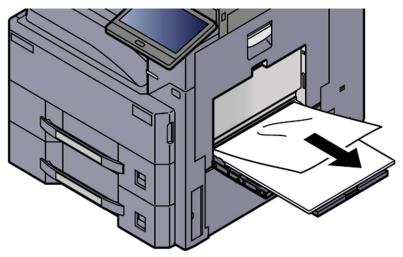

Remove all the paper.

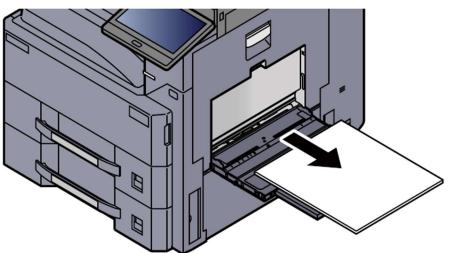

3 Reload the paper.

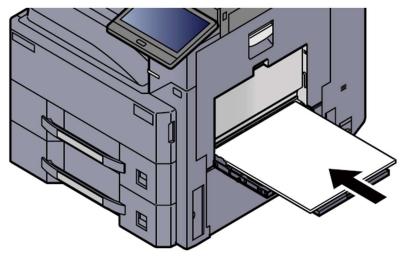

KYOCERA Document Solutions UK Eldon Court, 75-77 London Road, Reading, RG1 5BS

Web: www.kyoceradocumentsolutions.co.uk